

Commissioning Backwater lifting station Ecolift

Article information

Item no.: 80203

GTIN:

Price group: 00

Description

Commissioning of the backwater lifting station Ecolift, exposed installation / floor slab installation

Scope of services:

- Inspection according to the inspection card
- Briefing on the functionality of the system
- Explanation of the monthly inspection by the owner-operator
- Information on the maintenance obligation for the owner-operator
- Concluding an optional maintenance contract with the client (regular maintenance is a prerequisite for the warranty and insurance cover)
- Fixing the control unit to the wall
- Installing the electrical components on the system
- Routing the electrical cables through the cable duct to the control unit and connecting them (max. cable length 5 m)
- System is handed over in a safe operational state

Requirements on site:

- Contact person must be on site
- Access to the system and control unit
- A hose water connection must be provided nearby
- Wastewater discharge is connected
- The backwater valve must be clean
- Inlet pipes must be flushed
- System components, small parts and the operating instructions must be available in full on site
- Permanently installed socket on the wall, usually a socket next to the control unit, max. 2 m away from the cable duct opening

Note:

- The stated price is a net price and therefore not eligible for a discount.
- The lifting station must be serviced every six months by a specialist company.
- Flat commissioning rate includes a maximum of 1.5 installation hours on site.

- Any additional incidental expenses are charged based on the expenses incurred
- From the commissioning to the execution of the service, a processing time of 10 working days should be expected.