

## Maintenance Ecolift

### Article information

Item no.: 80303

GTIN:

Price group: 00

### Description

Maintenance of the backwater lifting station Ecolift, exposed installation / floor slab installation

### Scope of services (all work is carried out according to the inspection card):

- Visual inspection to make sure that it is functioning
- Cleaning the system
- Checking the non-return valves
- Checking the pump function
- Checking the control unit
- Information on the maintenance obligation for the owner-operator, optional
- System must be handed over in a safe operational state
- The recorded values are documented in a maintenance report

### Requirements on site:

- Contact person must be on site
- Access to the system and control unit
- A hose water connection must be provided nearby

### Chamber systems:

- In the case of service work on chamber systems, according to BGV C5 § 34, BGR 236, the clearance measurements of sewer gases, the use of fall protection and for safety reasons an additional safety attendant are required
- The safety attendant must be provided by the customer and must be present for the entire duration of the work

### Note:

- Regular maintenance is a prerequisite for the warranty and insurance cover

### Not included are costs for:

- Material expenses over 20 euros
- Any additional incidental expenses are charged based on the expenses incurred
- Difficult conditions, repair services, additional work
- Wasted journeys despite prior notice

The backwater lifting station Ecolift must be serviced every six months by a specialist company in accordance with DIN 1986-3.

The price stated is for each maintenance operation.